


Instructions: 12 inch Portable Paper Trimmer

FISKARS®

How to Replace the Blade:

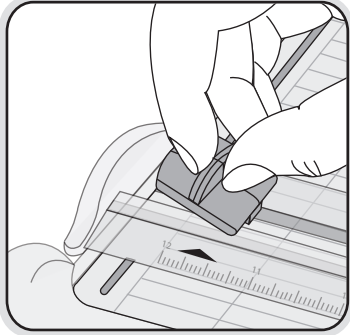

Slide the blade carriage down the rail to the blade removal groove. When nearing the groove, begin pulling it up and it comes right out.

Set the new carriage into the groove, slide it up the rail and you're ready to cut.

